

## ADLER Clean-Aqua-Disinfectant Pro

**8073**

Water-based surface disinfectant-cleaner for professional and non-professional users

### PRODUCT DESCRIPTION

**General** Water-based, ready-to-use surface disinfectant and surface cleaner with bactericidal, levurocidal, limited virucidal and cleaning action.

#### Special properties and standards

- Authorisation as biocidal product for surface disinfection (product types 2 and 4).  
**Active substance:**  
0.2 % (0.2 g / 100 g) Benzalkonium chloride
- **EN 13624** (levorozide): effectiveness against fungi (*Candida albicans*) according to EN phase 2 / step 1 (suspension tests): 1, 5 and 15 min at high contamination
- **EN 13727** (bactericidal): effectiveness against bacteria (*Staphylococcus aureus*, *Enterococcus hirae*, *Pseudomonas aeruginosa*) according to EN phase 2 / step 1 (suspension tests): 1, 5 and 15 min at high contamination
- **EN 14476** (limited virucidal): effectiveness against viruses (*Vacciniavirus*, MVA) according to EN phase 2 / step 1 (practical tests): 1 min at high organic contamination
- **EN 13697** (bactericidal and levurocidal): effectiveness against bacteria (*Staphylococcus aureus*, *Enterococcus hirae*, *Pseudomonas aeruginosa*, *Escherichia coli*) practical tests: 15 min at high contamination, effectiveness against fungi (*Candida albicans*) practical tests: 5 min at high contamination

#### Application areas

- For fast, general disinfection and gentle cleaning of surfaces, porous surfaces and objects, especially in health care facilities (e.g. toilet seats, door handles, bedsteads, rescue vehicles), working surfaces in medical laboratories and surfaces in food and canteen kitchens, including those that come into contact with food or feed.
- Suitable for treating surfaces coated with ADLER-lacquers.
- Suitable on plexiglass and polycarbonate. With unknown plastic materials and unknown coated surfaces, a test for material compatibility must be carried out before use.
- Especially suitable for various objects in the household, e.g. furniture, tables, chairs, changing mats, children's toys, fittings, cutting boards, refrigerator, etc.

03-21 (supersedes 10-20) ZKL 8073

ADLER-Werk Lackfabrik, A-6130 Schwaz  
Phone: 0043/5242/6922-190, Fax: 0043/5242/6922-309, Mail: [technical-support@adler-lacke.com](mailto:technical-support@adler-lacke.com)

Our instructions for use are based on knowledge available currently and shall guide the buyer/user to the best of one's knowledge, but, however, must be clarified for the areas of application and processing conditions on a case-to-case basis. The buyer/user is responsible for deciding on the suitability and use of the delivered product, which is why it is recommended to produce a sample to check the suitability of the product. Our general terms and conditions of sale are otherwise applicable. All previous data sheets are rendered invalid with the issue of this one. Rights reserved for the modification of the container sizes, colour shades and degrees of gloss available.

## PROCESSING

### Instructions for use

- Apply undiluted to the surface to be disinfected using a soaked cloth or spray bottle. Wipe the surface with a disposable cloth.
- Ensure complete wetting of the surface during the recommended exposure time.
- Exposure time at low contamination 1 min, at high contamination up to 5 min. Otherwise complete disinfection is not guaranteed.
- The surface should not be touched for at least 5 minutes and preferably 60 minutes to ensure full effect.
- Ensure good ventilation in the room.
- **ARL 072 - Working guideline Durability of ADLER Clean Disinfectant**
- Please follow our **ARL 073 - Disinfectants - basic terms**.

### Application technique



- Apply undiluted onto the surface to be disinfected using a cloth or spraying.
- Application quantity approx. 50 ml/m<sup>2</sup>.
- The product is ready to use.


## ORDERING INFORMATION

### Size of trading unit

500 ml, 5 l

## FURHTER DETAILS

### Durability / storage

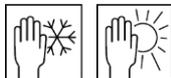

At least 2 years in the original sealed containers.

Regarding the durability after opening, in not re-sealed containers, a period of 6 months applies.

Make sure the product is protected against moisture, direct sunlight, frost and high temperatures (above 30 °C).

### Safety-related information information



Further information on the subject of safety during transport, storage and handling as well as disposal can be found in the relevant safety data sheet. The current version can be accessed on the Internet at **[www.adler-lacke.com](http://www.adler-lacke.com)**.

Use biocidal products safely. Always read the label and product information before use.

It should therefore be kept out of reach of children.